

GRUNDFOS UP, UPS, & TP CROSS REFERENCE GUIDE**CIRCULATOR REPLACEMENT GUIDE (SERIES UP)****CLOSED SYSTEMS(CAST IRON CONSTRUCTION)**

| GRUNDFOS | TACO | BELL & GOSSETT | ARMSTRONG | LAING |
|--|-------------------------|---------------------------------------|-------------------------|------------|
| UP15-42F/FR (BRUTE II) UPS15-42F | 005, '007,'008 | LR20-BF LR20-BF,NRF-22, 100 NFI | S25, SS30* ASTRO-30 | SM909-14 |
| UP26-64F | 009, '00010 110,'113 | PR | SF15*, SS50 S-25,S35 | SM909-23 |
| UP26-96F UP26-99F | 009,'0011'113 | PR,PL36 PR B1 | H41 | N/A |
| UP26-116F | 13 | PL36 | N/A | N/A |
| UP43-75F UP50-75@ | 111,112,0012 0012 F2 | HV,SER.1-1/2" PL45 2" | S34,H32,H41 S35 | N/A N/A |

OPEN SYSTEMS(STAINLESS STEEL OR BRONZE CONSTRUCTION)

| | | | | |
|--|------------------------------------|--------------------------------------|-------------------------------------|------------------|
| UP15-10B5+ UP15-10B7+ UP15-18SU^ UP15-18SF UP15-18B5+ UP15-18B7+ UP15-42SU^ UP15-42SF UP15-42B5+ | 006B | NBF 12/22 NBF 12/22U | ST10B*,SF15B* ASTRO 30B | SM202B SM303B |
| UP25-64SU^ UP25-64SF | 005B,007B | NBF 12/22 LR15-B | ST10B,SF15B, SS-30B* | SM909-14B |
| UP25-64SU^ UP25-64SF | 008B,110B | LR12-B,LR15-B, SER,100-B, | SR15B*,S25B, SS-50B* ASTRO 50 | SM909-23B |
| UP26-96BF UP26-99BF | 009B,0010B, 0011B,110B, 113B | PR-B,LR-12B | H41B SS-100B* | N/A |
| UP26-116BF UP43-75BF | 0013B 111B, 112B, 0012B | PL36B PL45B, HVB, SER.1 1/2" B | N/A S34B*,H32B H41B | N/A N/A |

VERSAFLO UPS/TP In-Line Circulator Pumps**CROSS REFERENCE GUIDE: 200/7000 TO UPS/TP**

| GRUNDFOS SERIES | GRUNDFOS SERIES | HP | PORT TO PORT LENGTH | FLANGE SIZE | GRUNDFOS MODEL VRSFL | GRUNDFOS MODEL VRSFL TP | HP | PORT TO PORT LENGTH | FLANGE SIZE |
|----------------------------|-----------------|-----|---------------------|-------------|----------------------------|-------------------------|-------|---------------------|-------------|
| OLD-SERIES 200/7000 | | | | | NEW-VERSAFLO UPS/TP | | | | |
| | | | | | UPS32-40 | TP32-40 | 1/3 | 11" | 1-1/4" |
| | | | | | UPS32-80 | TP32-80 | 1/2 | 11" | 1-1/4" |
| | | | | | UPS32-160 | TP32-160 | 3/4 | 13-1/2" | 1-1/2" |
| UMC50-40 | UMT50-40 | 1/4 | 10" | 2" ANSI | UPS40-40 | TP40-40 | 1/3 | 13-1/2" | 1-1/2" |
| UMC50-80 | UMT50-80 | 1/2 | 10" | 2" ANSI | UPS40-80/4 | | 1/2 | 13-1/2" | 1-1/2" |
| UPC50-160 | UPT50-160 | 1 | 10" | 2" ANSI | UPS40-80/2 | TP40-80 | 3/4 | 13-1/2" | 1-1/2" |
| | | | | | UPS40-240 | TP40-240 | 1-1/2 | 13-1/2" | 1-1/2" |
| UMC65-40 | UMT65-40 | 1/3 | 12" | 2-1/2" ANSI | UPS50-40 | TP50-40 | 1/3 | 14" | 2" |
| UMC65-80 | UMT65-80 | 3/4 | 12" | 2-1/2" ANSI | UPS50-80/4 | | 3/4 | 11-1/2" | 2" |
| | | | | | UPS50-80/2 | TP50-80 | 3/4 | 11-1/2" | 2" |
| UPC65-160 | UPT65-160 | 2 | 12" | 2-1/2" ANSI | UPS50-160 | TP50-160 | 1-1/2 | 14" | 2" |
| | | | | | UPS50-240 | TP50-240 | 2 | 14" | |
| | UMT80-40 | 3/4 | 14-1/2" | 3" ANSI | UPS80-40 | TP80-40 | 1/2 | 19" | 3" ANSI |
| UMC80-80 | UMT80-80 | 1 | 14-1/2" | 3" ANSI | UPS80-80 | TP80-80 | 1-1/2 | 19" | 3" ANSI |
| UPC80-160 | UPT80-160 | 3 | 14-1/2" | 3" ANSI | UPS80-160 | TP80-160 | 3 | 19" | 3" ANSI |
| | | | | | | TP80-240 | 3 | 19" | 3" ANSI |
| | | | | | UPS100-40 | TP100-40 | 1 | 21" | 4" ANSI |
| | | | | | | TP100-80 | 2 | 21" | 4"ANSI |
| | | | | | | TP100-160 | 3 | 21" | 4" ANSI |

Notes:

^ Requires union connection fittings

+ Sweat Connection

'@ Replacement flange recommended

* Discontinued

This replacement guide is for your reference only. Refer to

Grundfos technical data to ensure you obtain the correct

SERIES UP**OLD**

UPS20-42
UPS40-75
UP25-42SF
UM15-10

NEW

UPS15-42
UP43-75
UP15-42SF
UP15-10

Grundfos pump for you specific application. For additional literature, please contact your local Grundfos supplier, or call the Grundfos Customer Support Center near you.

UM25-18SU

UP15-18

